 


## Removable Core System Accessories



Item Number	Description
31211 52 243	Key Blank

Opens every core.

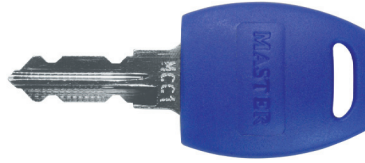

Item Number	Description
31411 13 242	M1 Master Key

Removes each core from every housing.

 


Item Number	Description
31511 25 781	M1 Core Removal Key




Item Number	Description
33991 12 035	Plastic Dummy Core


## Strike Plates

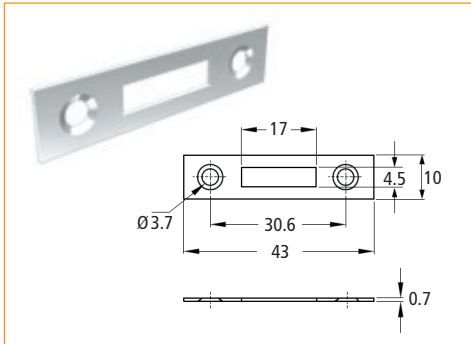


Item Number	Description
33431 46 008	Strike Plate

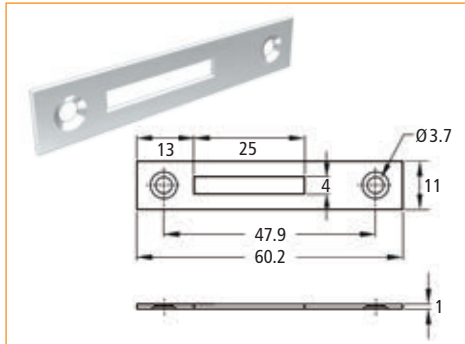 

Item Number	Description
33411 04 760	Offset Strike Plate

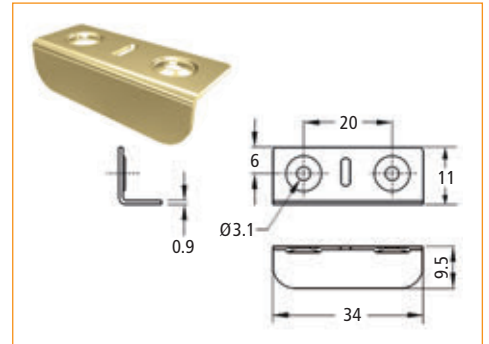 

Item Number	Description
33431 03 009	L-Type Strike Plate

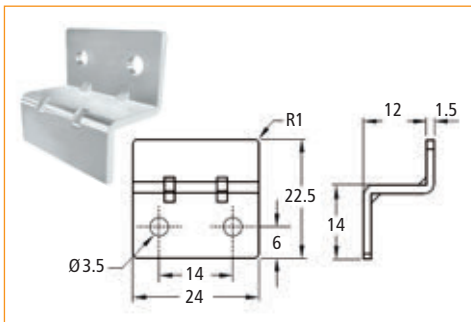 

Item Number	Description
33431 46 010	Offset Strike Plate